


1

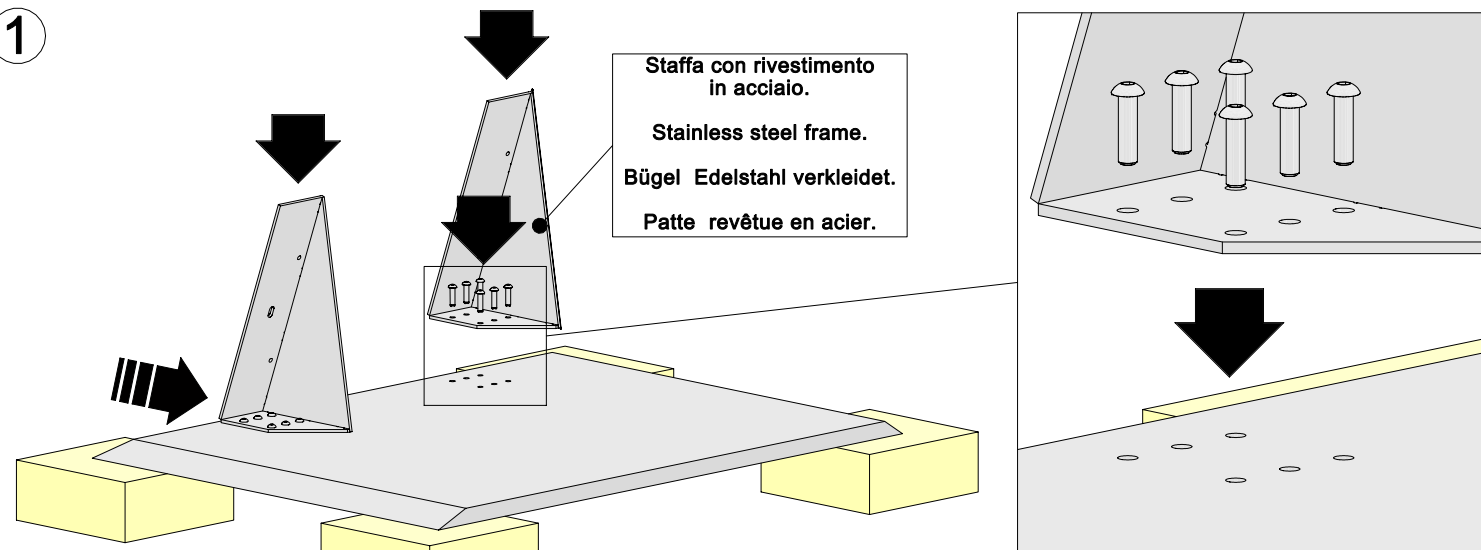


Fissare le due staffe alle gambe usando le apposite viti.
IMPORTANTE: FISSARE LE DUE STAFFE ASSOLUTAMENTE VERSO IL BASSO!!!!

Fix both frames to the legs using the provided screws.
IMPORTANT : FIX THE TWO FRAMES DOWNWARD!!!!


Die zwei Bügel, durch die dazugehörige Schrauben mit den Beine bitte befestigen.
WICHTIG: DIE ZWEI BUEGEL UNBEDINGT HINAB BEFESTIGEN!!!!

Fixer les deux pattes aux pieds avec les vis en dotation.
TRES IMPORTANT: IL FAUT ABSOLUMENT FIXER LES PATTES AVERS LES BAS!!!!


N° 24 TBCE M8x30 N.



N° 01 da 5.



2

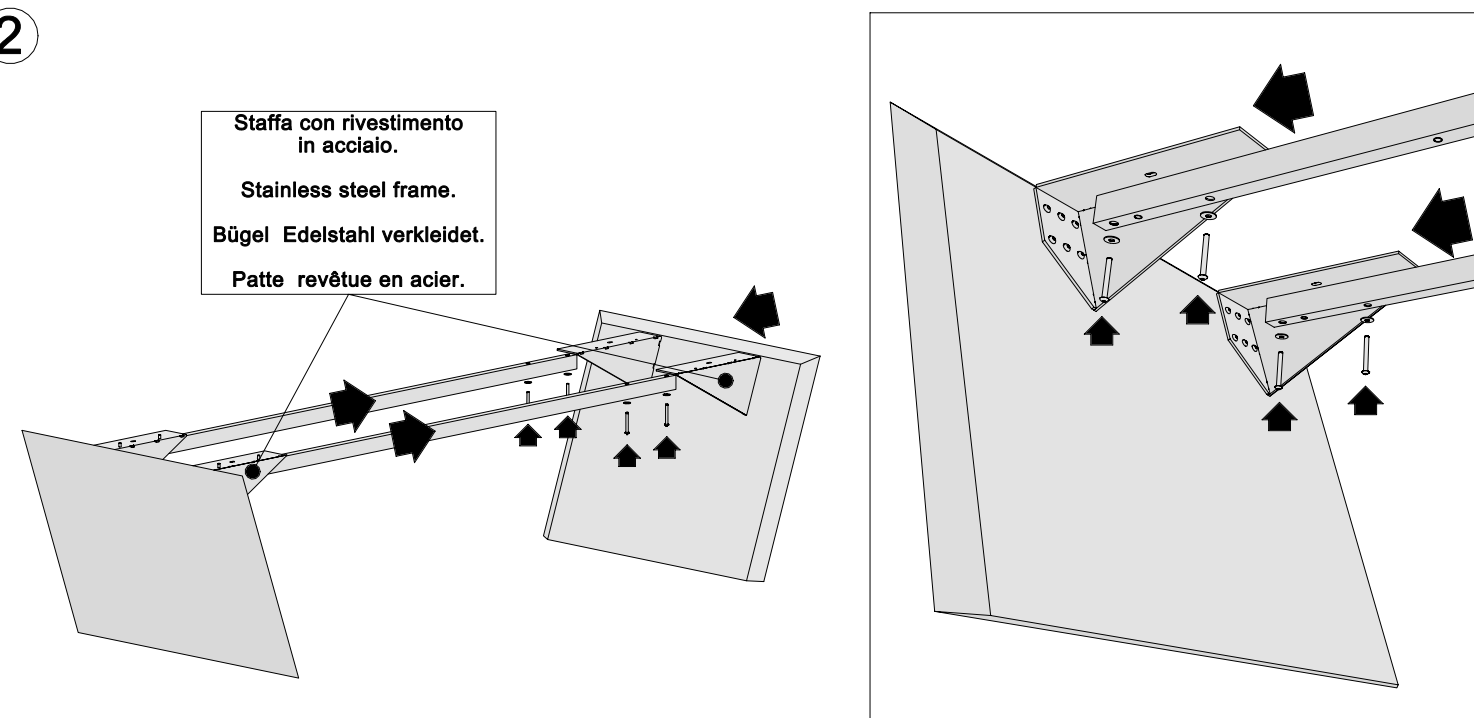


Pre-montare le due gambe alle due traverse.

Pre-assemble the two legs to the two traverses.

Bügel Edelstahl verkleidet Vorher die zwei Beinemit den zwei Querträger bitte befestigen.

Il faut monter à l'avance les deux jambes aux traverses.


N° 08 TBCE M8x60 N.




N° 08 ø 8x24 N.



N° 01 da 5.



3

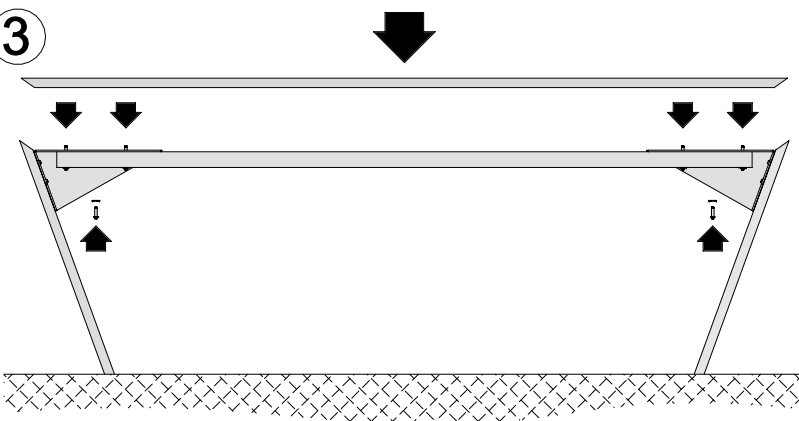


ATTENZIONE: PRIMA DI ASSEMBLARE IL PIANO CONTROLLARE IL VERSO DELLE FORATURE (VEDI PARTICOLARE) !!!!!

IMPORTANT: BEFORE ASSEMBLING THE TOP CHECK THE DIRECTION OF THE HOLES (SEE THE DETAILED DRAWING)!!!!

ACHTUNG: VOR DIE MONTAGE DER PLATTE, DIE RICHTUNG DEN BOEHRUNGEN UEBERPRUEFEN. (SKIZZE BEACHTEN).

ATTENTION : AVANT DE MONTER LE PLATEAU IL FAUT VERIFIER LE SENS DES PERCAGES. (VOIR DETAIL)!!!!

N° 04 TBCE M8x30 N.




N° 04 ø 8x24 N.




N° 01 da 5.



IMPORTANT!!!!

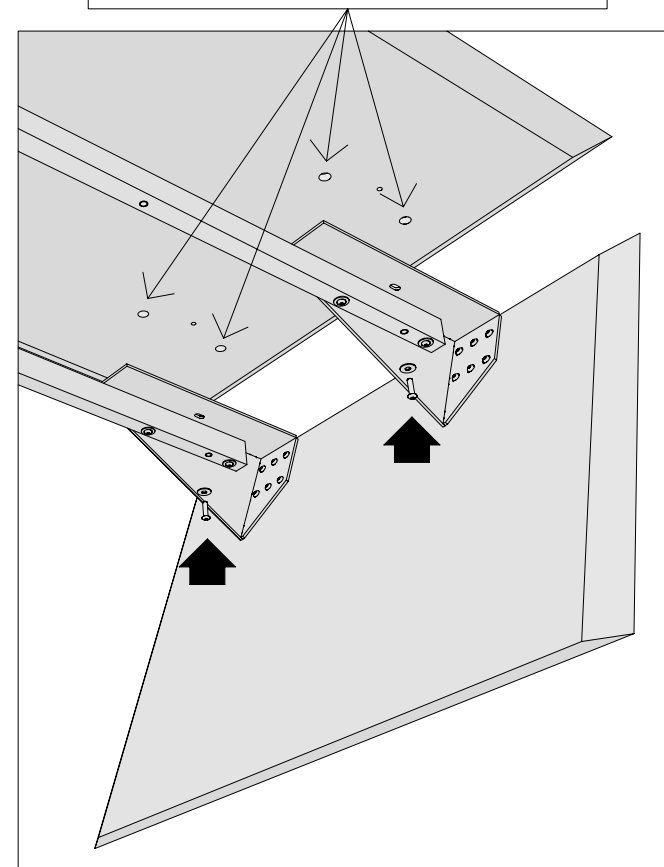

4

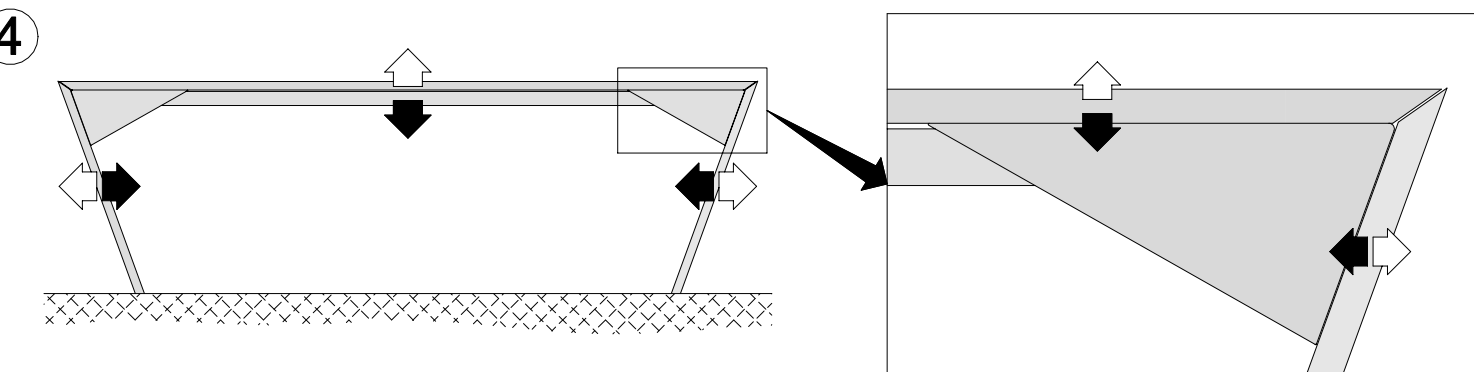

Per allineare il piano allentare le viti indicate nel particolare ① , quindi assestare il piano rispetto alle gambe e rifissare le viti.

To level the top loosen the screws indicated on the picture ① , then settle the top on the legs and fix the screws again.

Für die Anreihung der Platte, die Schrauben laut Skizze ① nachlassen, die Platte anpassen und die Schrauben wieder befestigen.

Pour l'alignement du plateau il faut d'abord desserrer les vis du point ① , par la suite aligner le plateau.

